



## MODEL ID: UCM-877

### INSTALLATION

**Step 1.** Assemble Part-1 and Part-2 with the fasteners provided. Find the position of each fastener as shown below. Make sure you tighten the nut and bolt until you have a smooth swivel motion of Part-1 around Part-2.


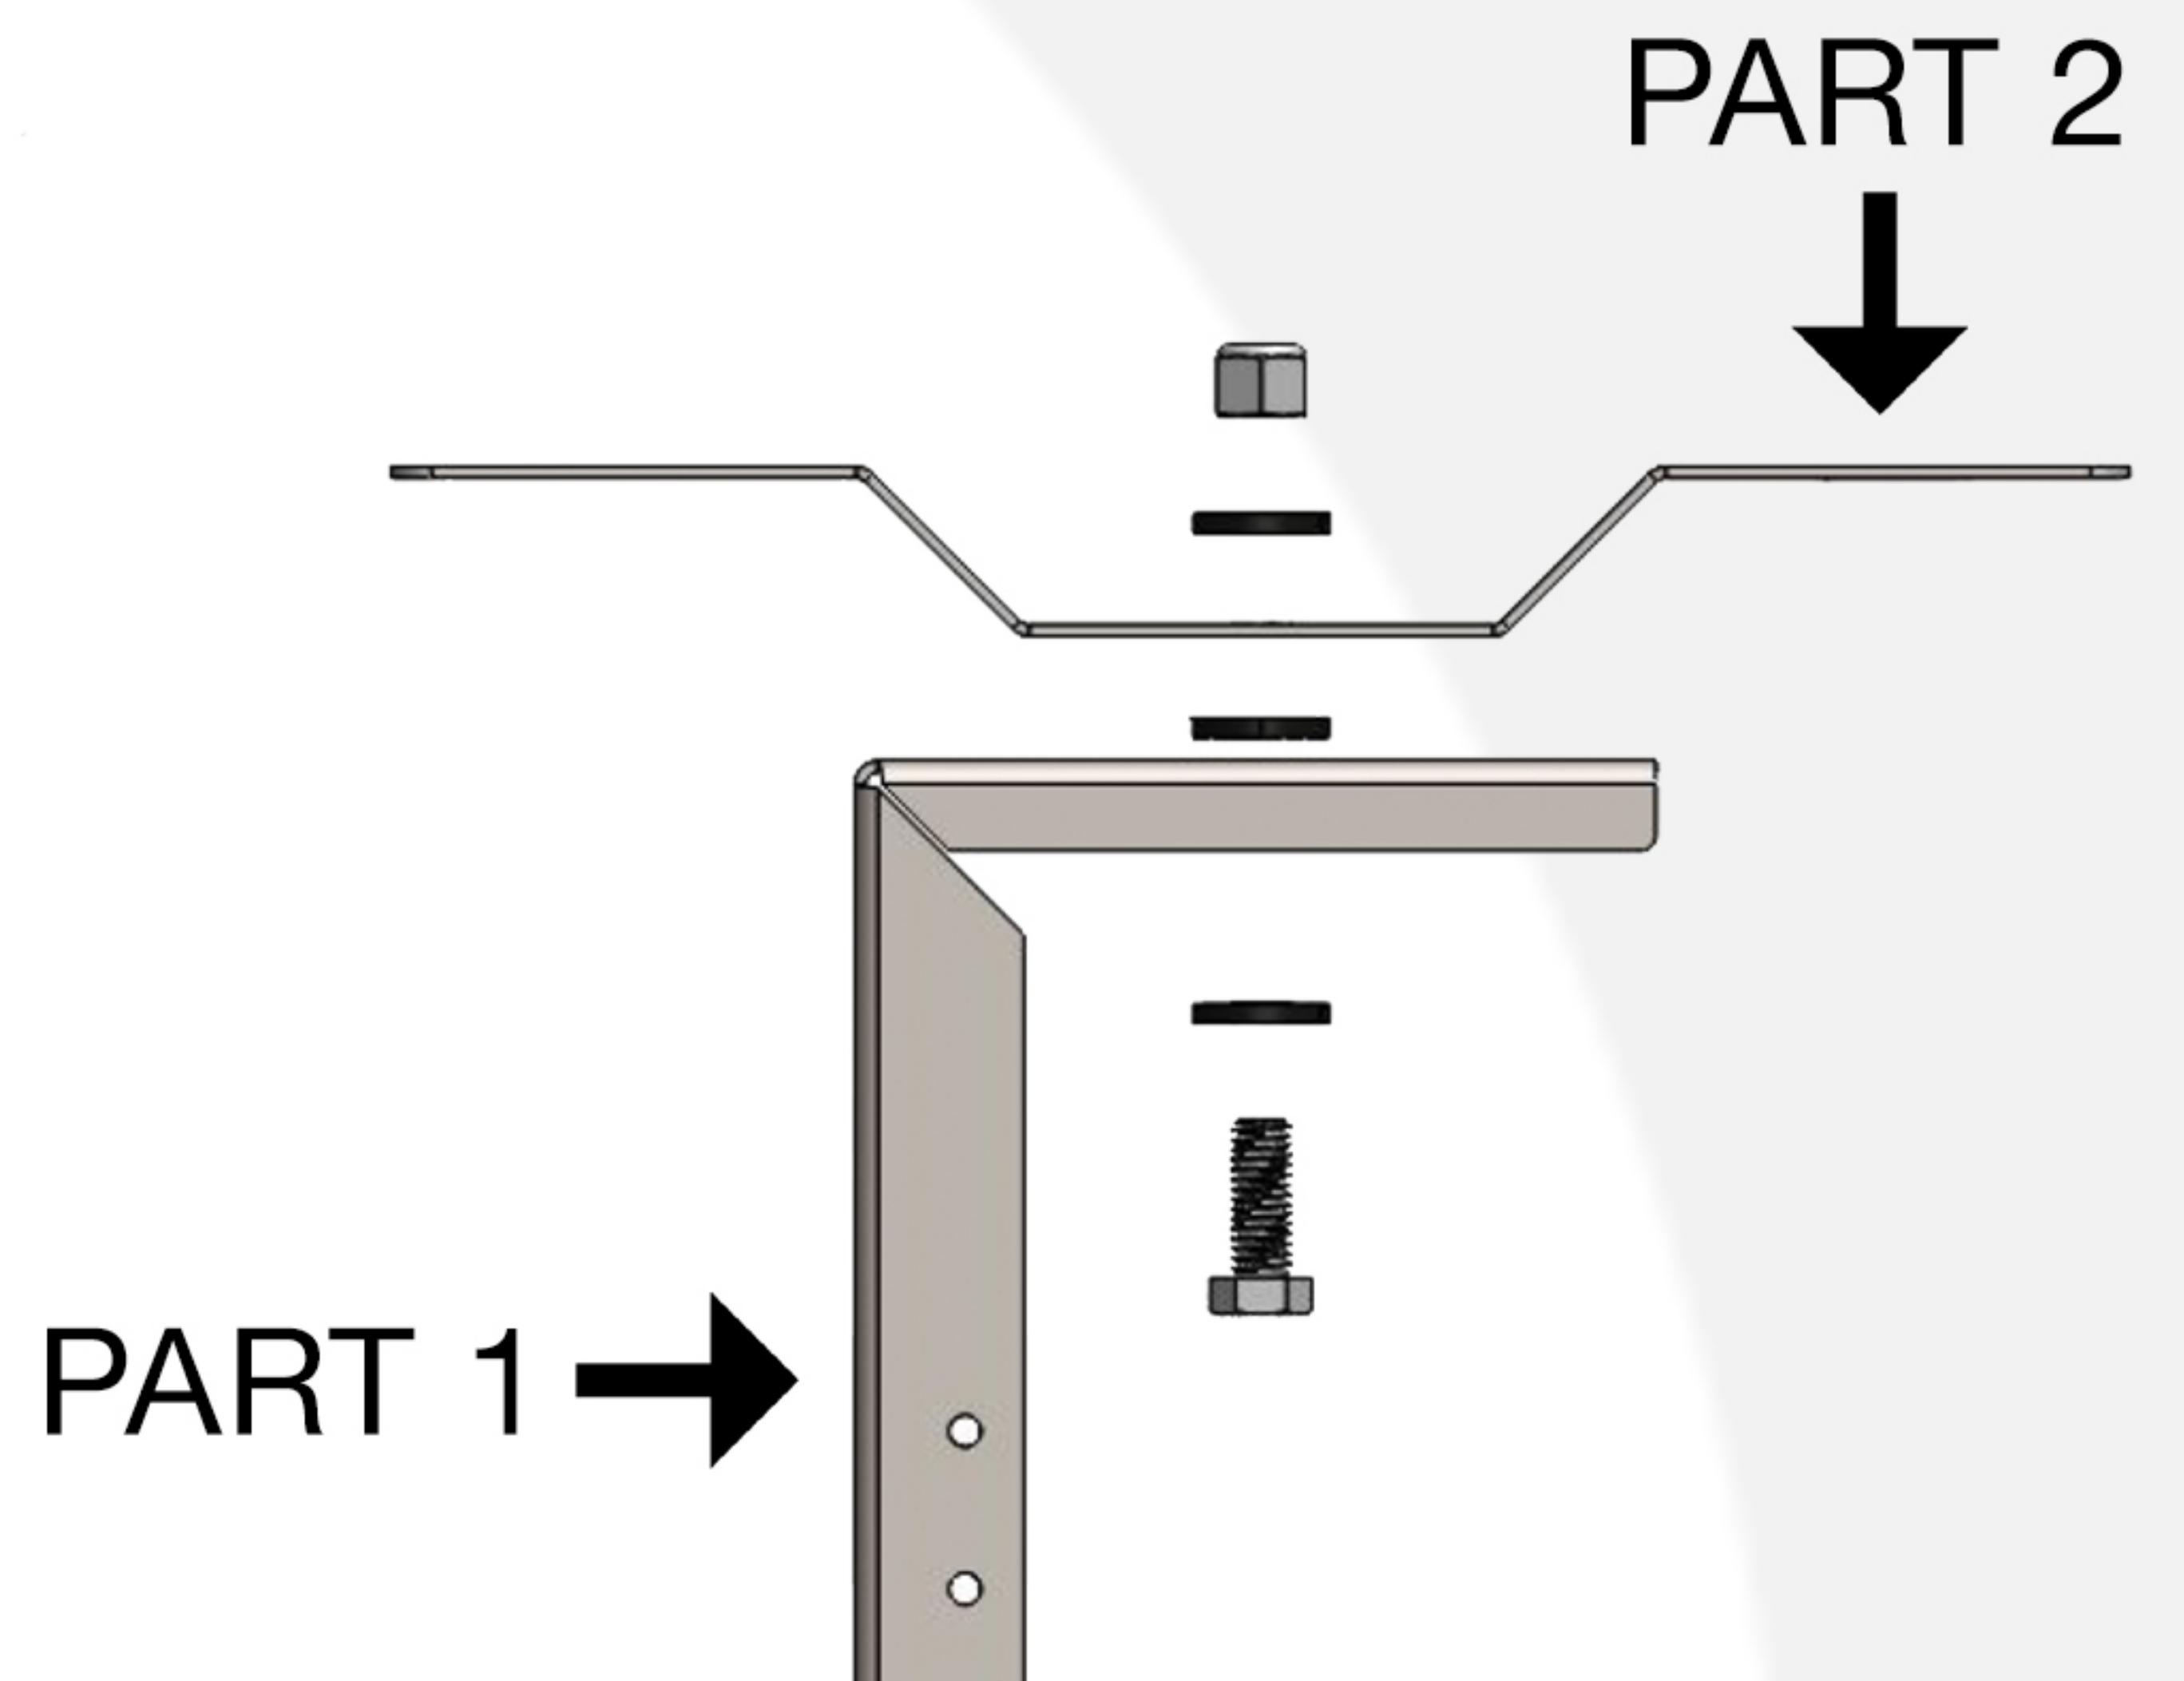


**Step 2:** Attach the assembled mount to the underside of desk and secure it with #10 wood screws provided.

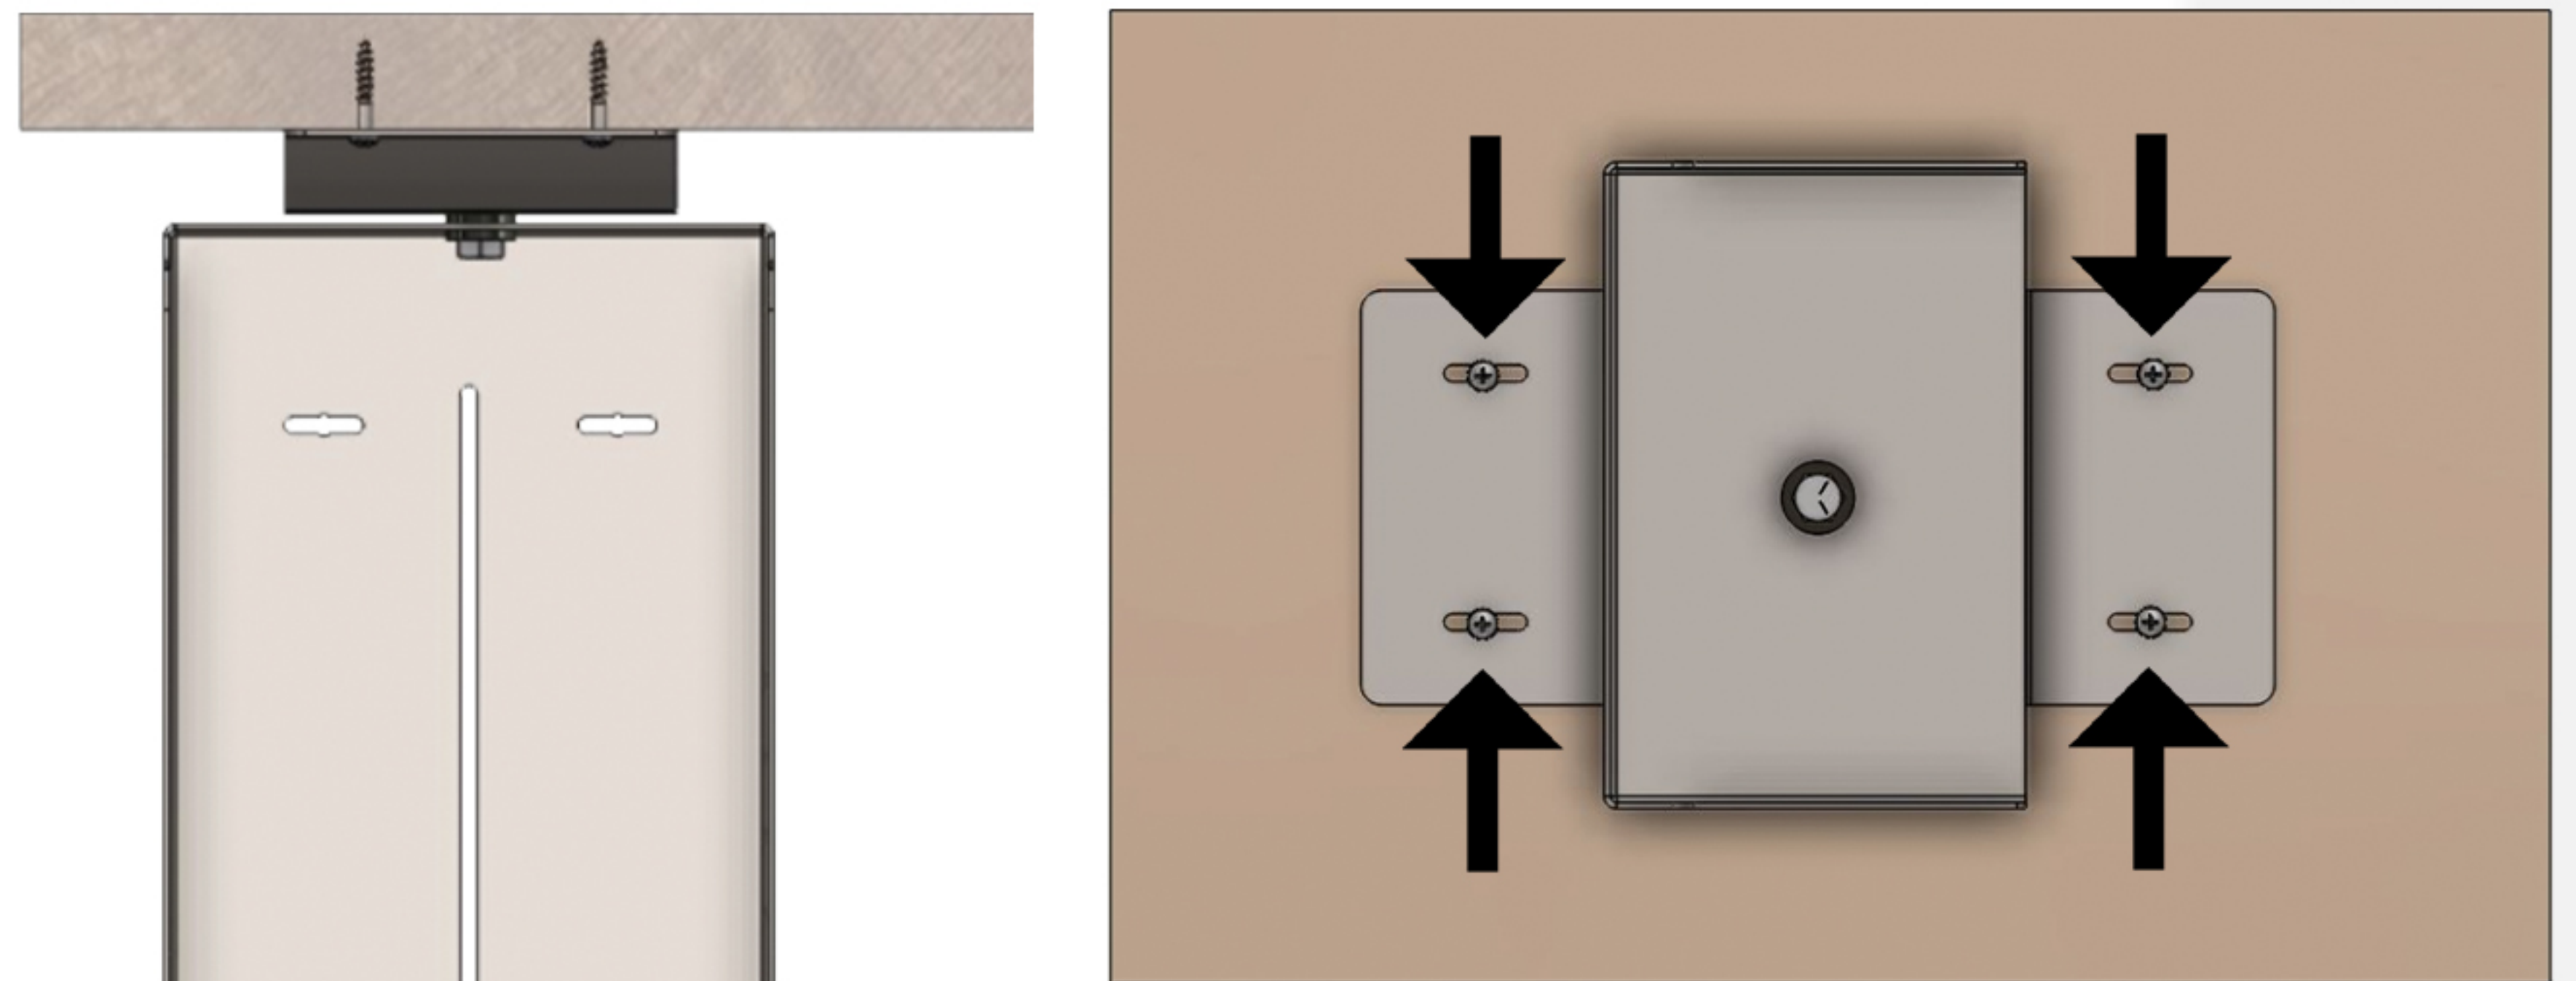

**Step 3:** Align Part-4 with Part-1 by determining the height of the computer and fasten the screws as shown in the below image.


**Step 4:** Tighten the screws to keep the mount in place with the wing nuts provided.

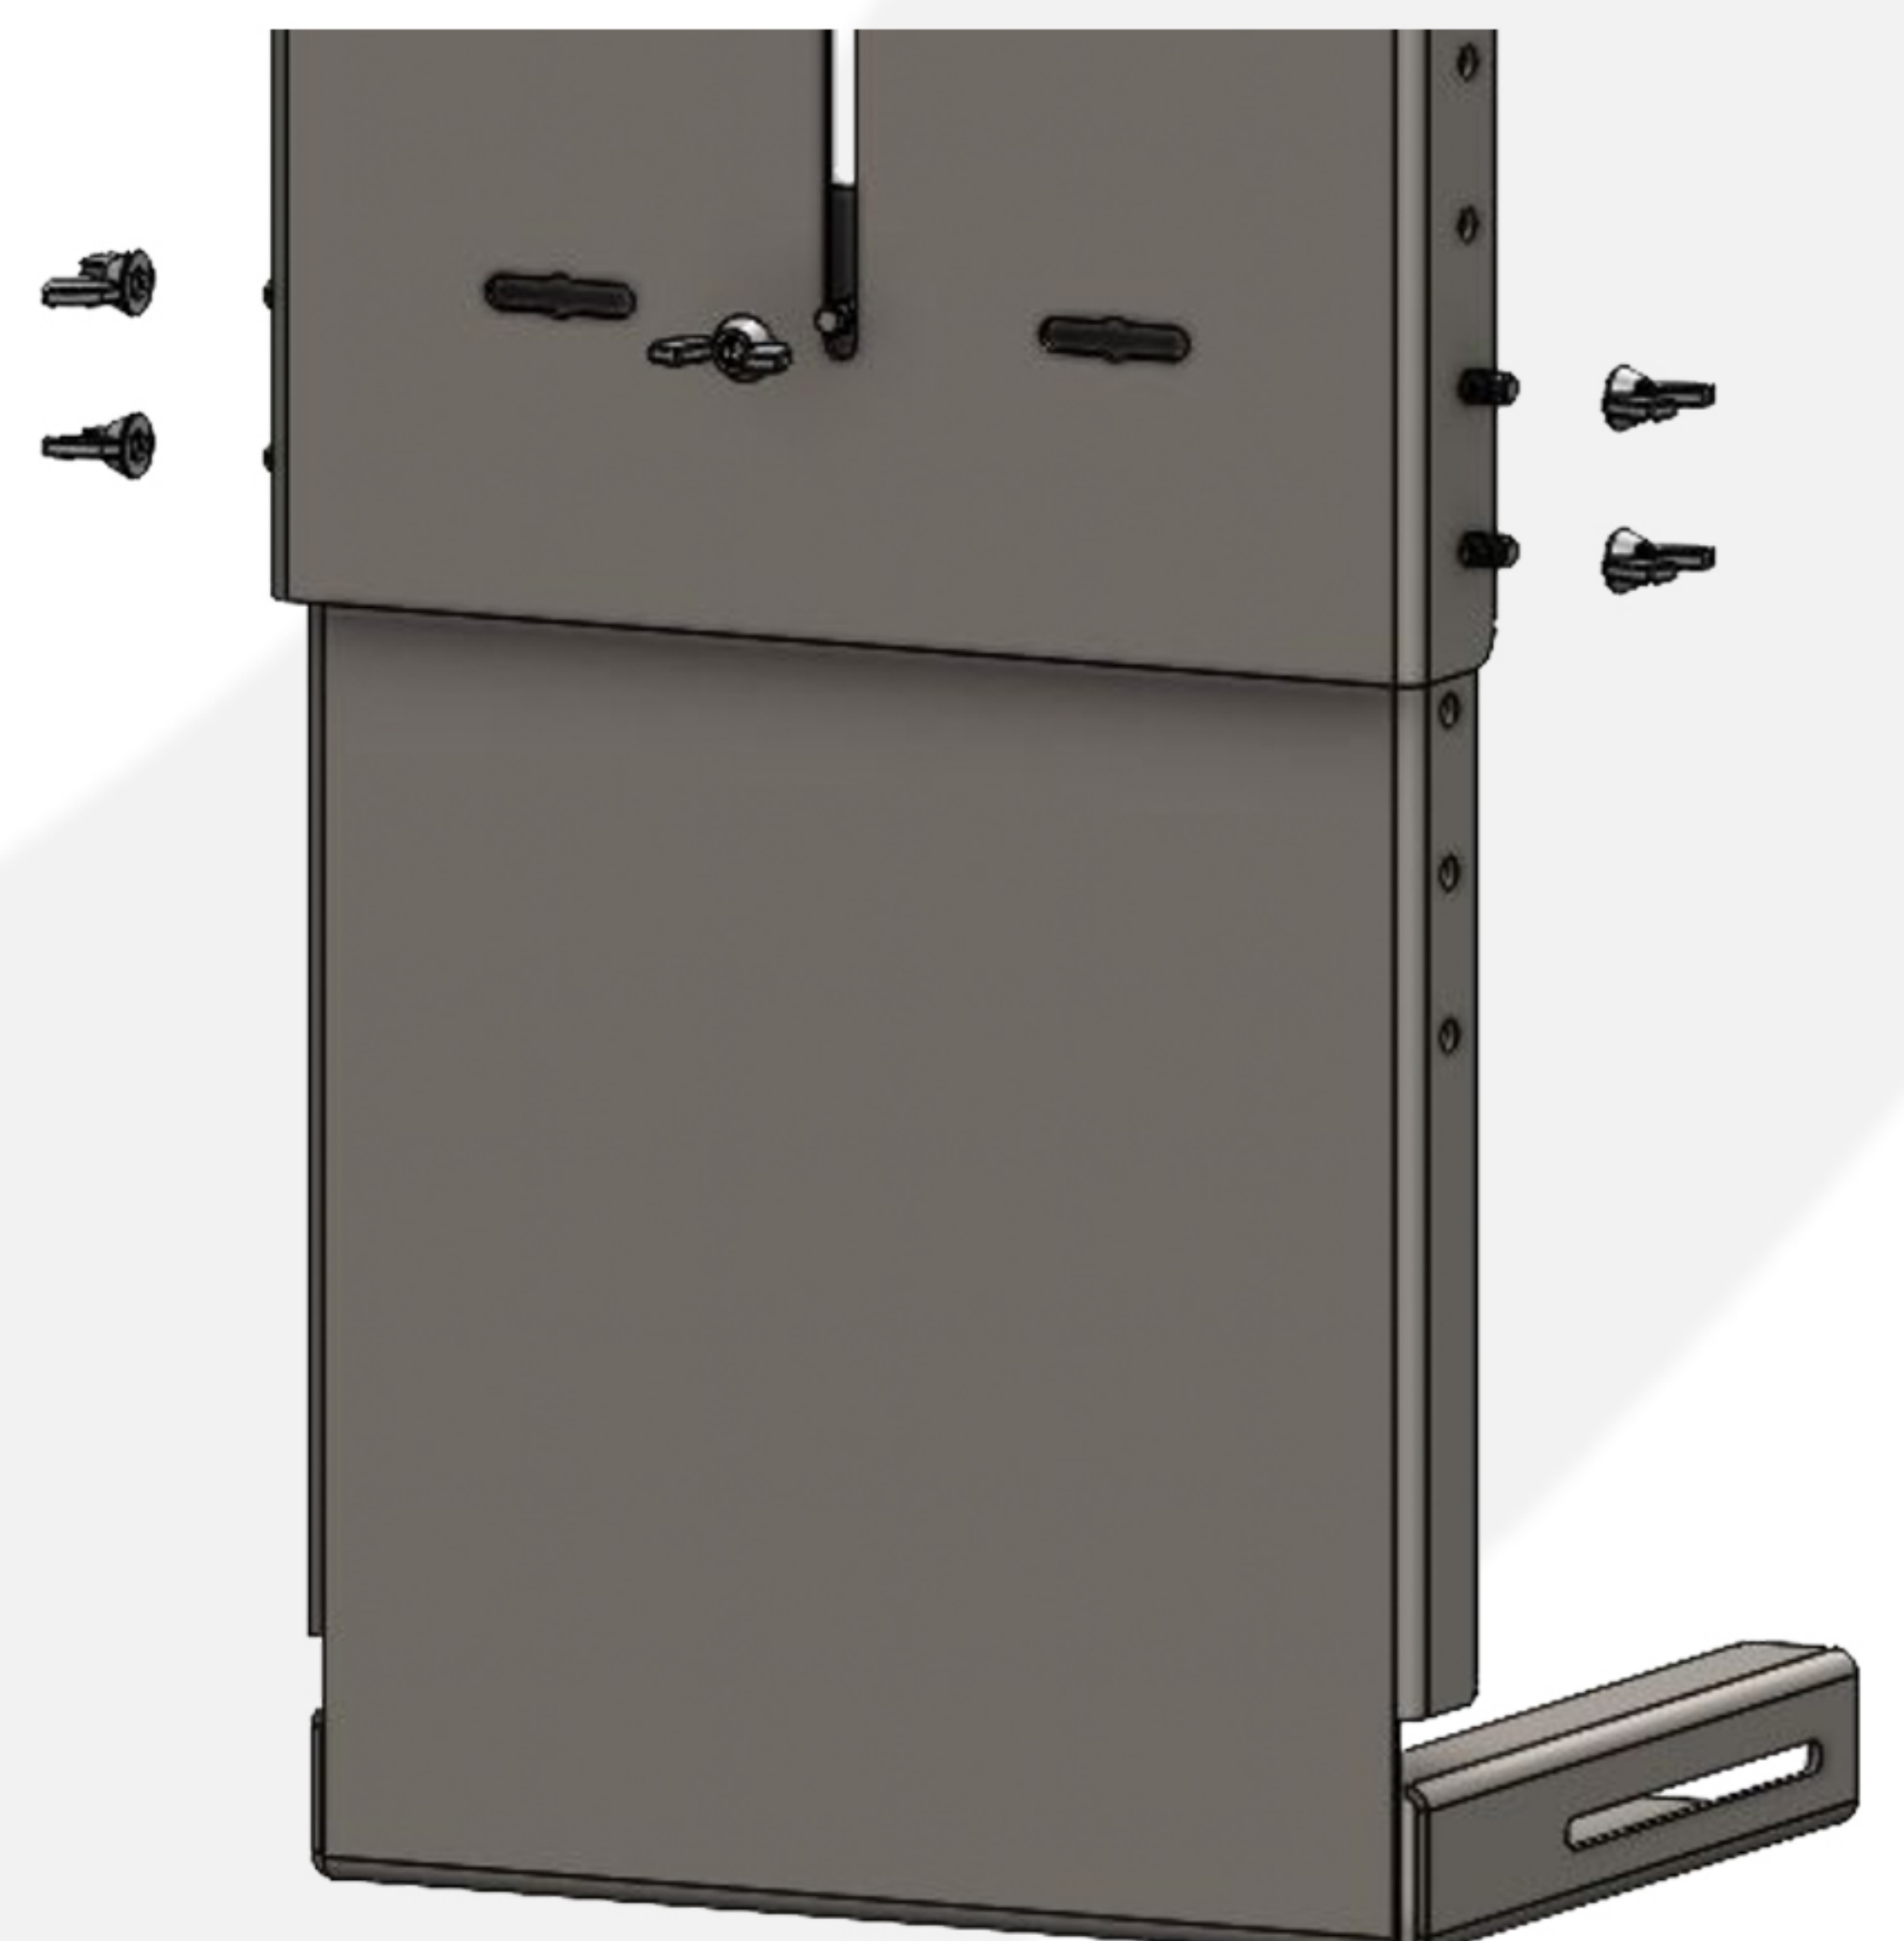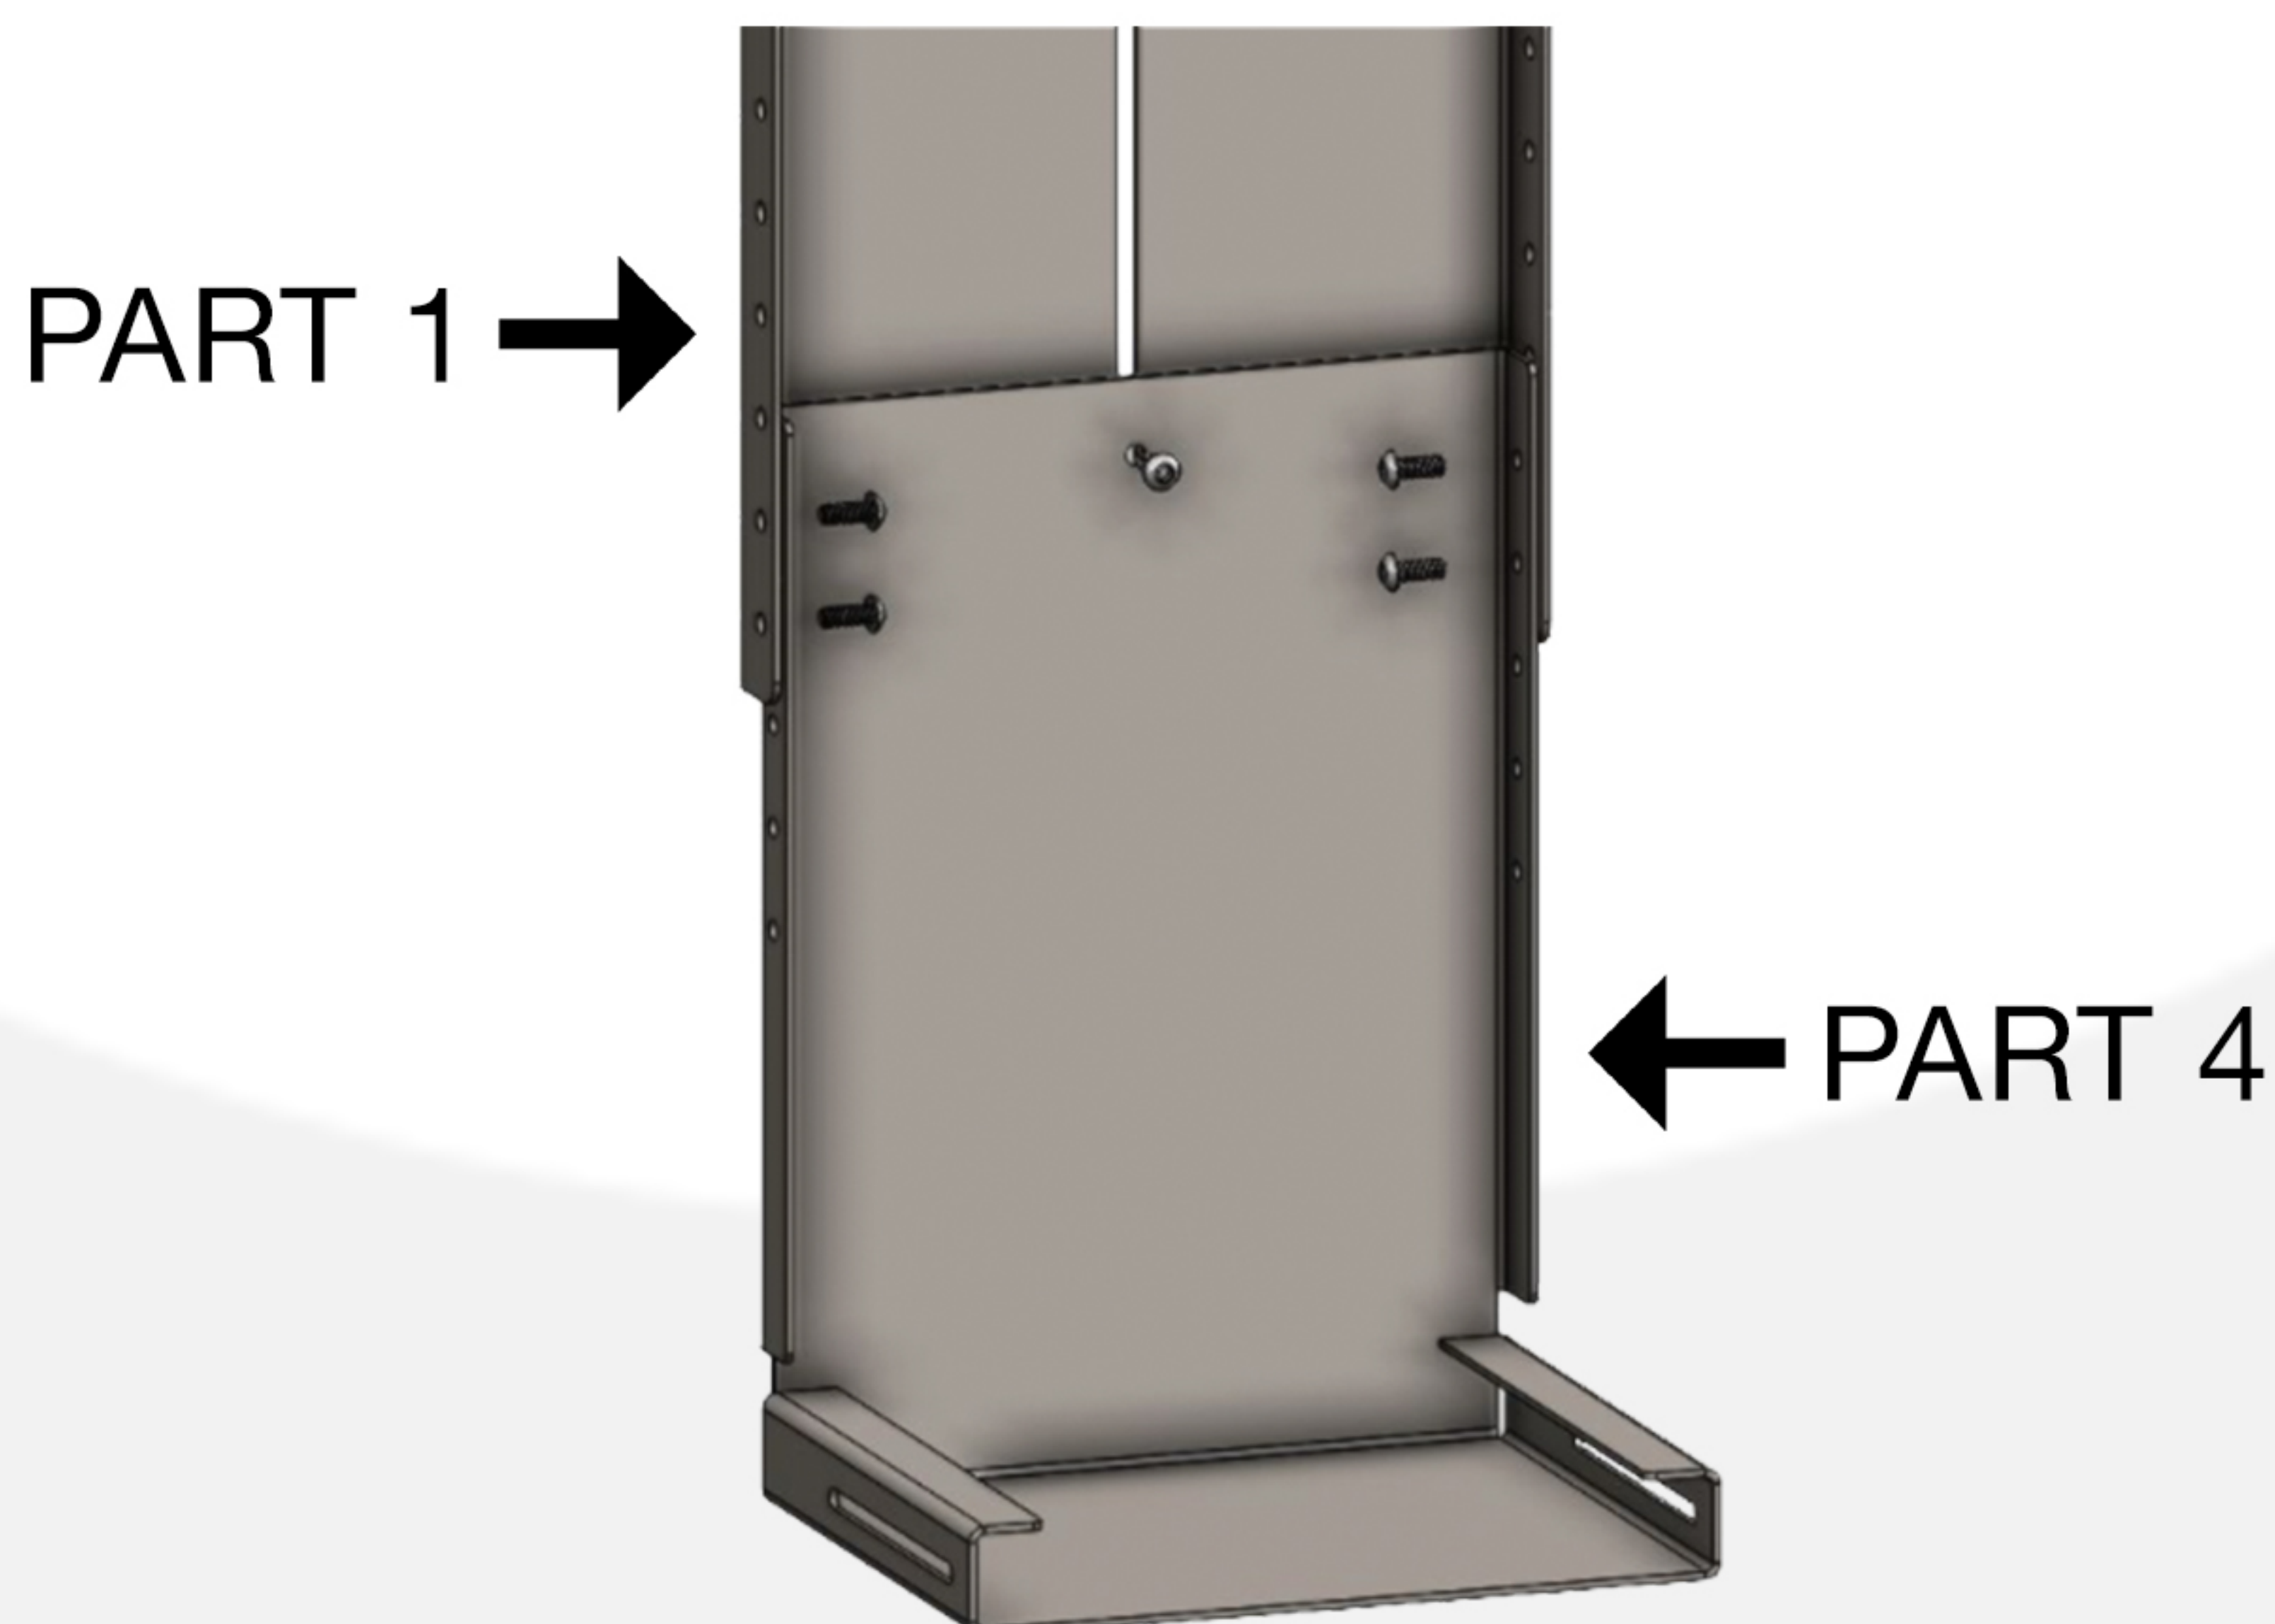

## MODEL ID: UCM-877

### INSTALLATION

**Step 5.** Slide the tipping Bracket (Part-3) and fasten it according to the width of the computer.

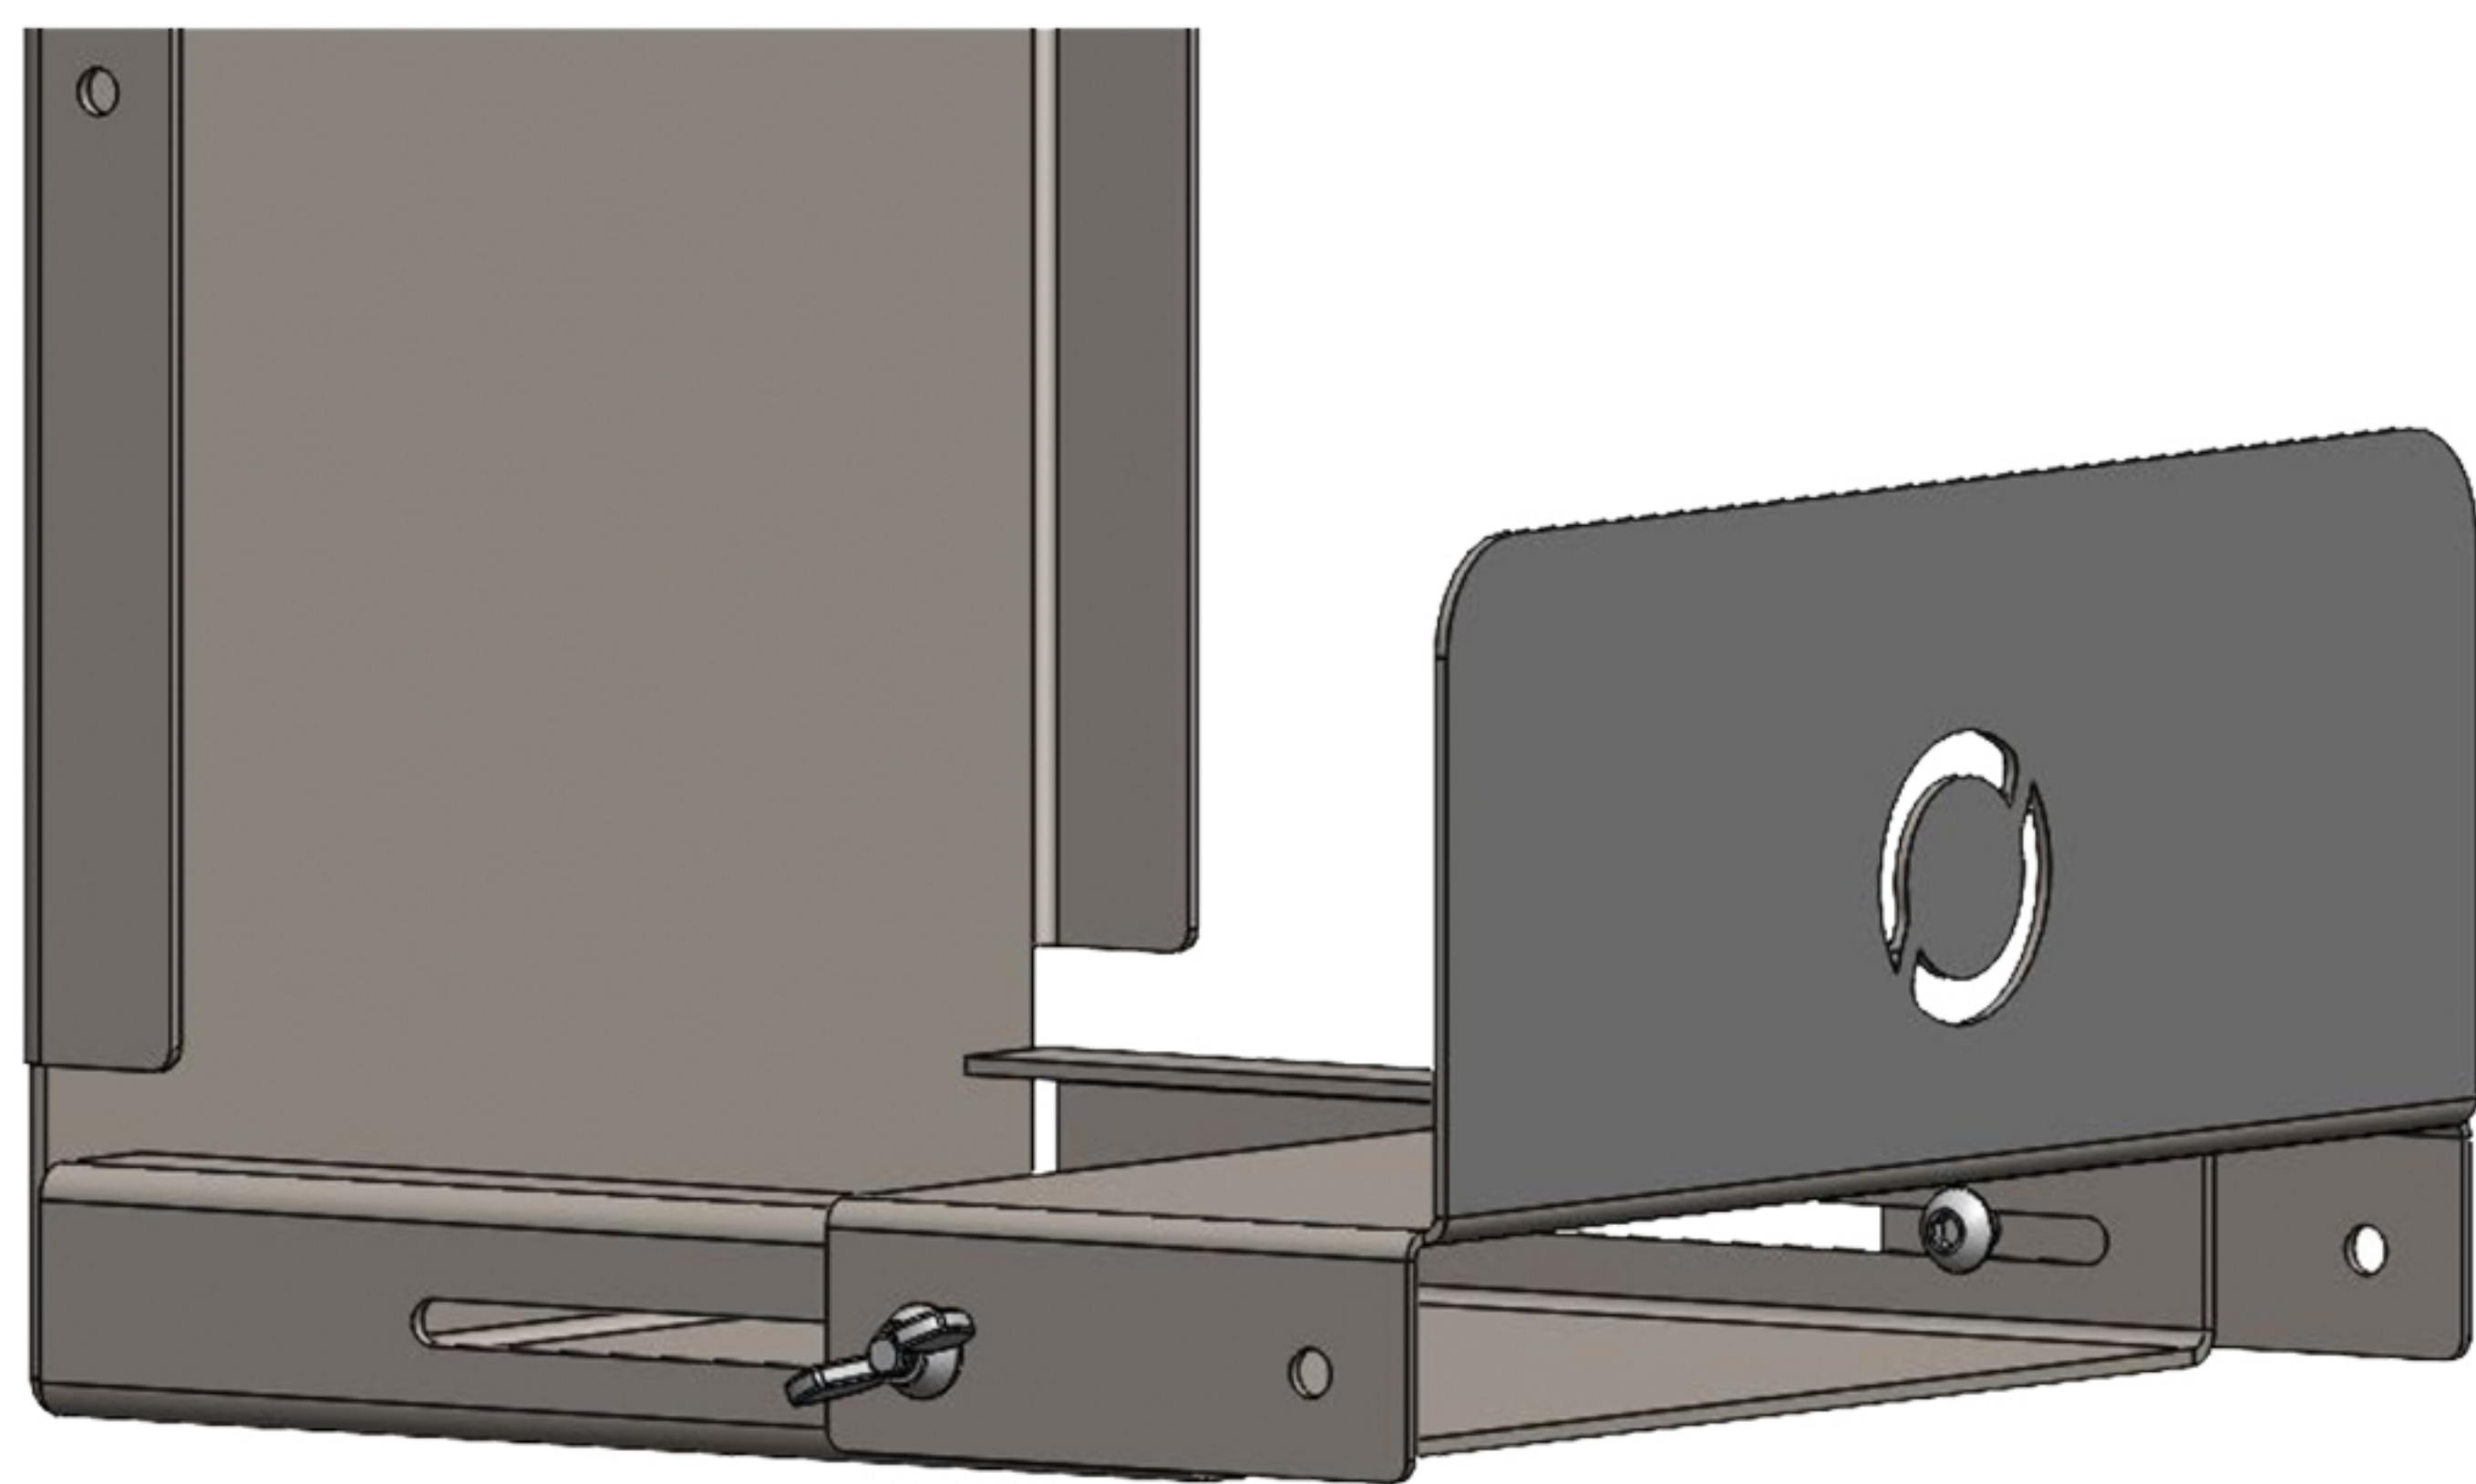

← PART 3

---

**Step 6.** Then slide your computer and adjust Part-3 to the width of the computer to prevent tipping. Enjoy the service!

